





SUMMIT #8



- 3 Axis Digital Readout
- Air Power Drawbar
- Coolant
- Work Light
- Spanners & Wrenches
- Levelling Bolts

## **STANDARD FEATURES**

- Automatic Lubrication
- Conveniently Located Operator's Panel
- Rapid Traverse
- Ball Screws on X & Y Axis

## FEATURES AND BENEFITS VERTICAL BED MILLS



SPECIFICATIONS	#3	#4	#5 / #5 VHL	#8 / #8VH
TABLE				
Working Surface	15" x 67"	17.7" x 74.8"	19" x 86.6"	29.5" x 106.3"
Table Top to Floor	31.5"	33.5"	33.9"	35.4"
Number of T-Slots	5		5	5
Number of Feeds	Infinitely Variable	Infinitely Variable	Infinitely Variable	Infinitely Variable
Maximum Table Load	1,760 lbs	2,200 lbs.	2,640 lbs.	4,400 lbs.
TRAVERSE				
Longitudinal Travel (X)	39.4"	47.35"	59"	78.75"
Cross Travel (Y)	15"	17.7"	23.6"	31.5"
Vertical Head Travel (Z)	19.6"	21.6"	27.5"	27.5"
VERTICAL SPINDLE HEAI	D			
Spindle Speeds (no.) range	(12) 45 - 1500 RPM	(12) 45 - 1500 RPM	(12) 45 - 1500 RPM	(var.) 45 - 1500 RPM
Spindle Feeds (no.) range	(Inf. Var.) .002008 IPR	(Inf. Var.) .002008 IPR	(Inf. Var.) .002008 IPR	(Inf. Var.) .118 - 11.8 IPM
Spindle Nose to Table Top	3.9" - 23.6"	3.9" - 23.6"	3.9" - 31.5"	2.75" - 30"
Spindle Center to Column	14.91"	17.7"	21.6"	31.75"
Spindle Taper	#50	#50	#50	#50
HORIZONTAL SPINDLE H	EAD			
Taper	N/A	N/A	N/A #50	N/A #50
Spindle Speeds (no.) range	N/A	N/A	N/A (12) 45-1450 RPM	M N/A (var.) 45-1450 RPM
Vertical Travel (W)	N/A	N/A	N/A 25.6"	N/A 25.6"
Rapid Traverse	N/A	N/A	N/A 150 IPM	N/A 150 IPM
FEEDS RANGE	_	_	_	
Longitudinal	1.1 - 34.4" IPM	1.1 - 34.4" IPM	0 - 39.4" IPM	1.1 - 39.4" IPM
Cross	1.1 - 34.4" IPM	1.1 - 34.4" IPM	0 - 39.4" IPM	1.1 - 39.4" IPM
Rapid Traverse	113.4 IPM	113.4 IPM	130 IPM	122 IPM
MOTORS				
Vertical Head	7.5 HP	10 HP	17.5 HP	17.5 HP
Feed Motor	N/A	N/A	5 HP	5 HP
Horizontal Head	N/A	N/A	N/A 7.5 HP	N/A 7.5 HP
Table Feed	1.7 HP	2 HP		
WEIGHTS, DIMENSIONS,	FI FCTRICS			
Length x Width x Height	79" x 126" x 95"	87" x 150" x 103"	101" x 175" x 113"	124" x 224" x 115"
Weight	8,800 lbs	11,400 lbs	15,400 lbs 19,140 lbs	
	0,000 100	11,100100	. 5, 100 100	20,000 100

WARRANTY: A copy of Summit Machine Tool LLC's standard written warranty is attached to each Summit Machine. Call or write to Summit for a copy or for further information concerning Summit's standard warranty. All purchases are subject to Summit's standard written warranty. Specifications are subject to change without notice.

**POINT OF OPERATION GUARDING** is the responsibility of the end user. For information contact your local OSHA office.

## **SUMMIT MACHINE TOOL LLC**

518 N Indiana Ave • Oklahoma City, OK 73106

MAIN 405.235.2075

FAX 405.232.5169



FOR MORE INFORMATION CALL 1-800-654-3262

WWW.SUMMITMACHINETOOL.COM